



COLOUR CODE	
The first letter of the code represents the main wire colour. The other letters represent the trace colour	
B- BLACK	X- LIGHT GREEN
L- BLUE	Z- LIGHT BLUE
G- GREEN	M- DARK GREEN
R- RED	T- DARK BLUE
Y- YELLOW	A- LIGHT BROWN
W- WHITE	E- SLATE
N- BROWN	D- TAN
O- ORANGE	
K- PINK	
S- GRAY	
V- VIOLET	
P- PURPLE	

#### KEY

- |  |  |  |   |   |
|--|--|--|---|---|
| 1. fusible link- main 60 amp                       | 16. to EFI control unit                              | 28. air conditioner high pressure switch                               | 39. to fuse No. 10                                | 51. LH front speaker  |
| 2. fusible link- alternator 30 amp                 | 17. to cigarette lighter                             | 29. air conditioner low pressure switch                                | 40. cruise control module                         | 52. RH front speaker  |
| 3. battery   | 18. to rear dimister switch                          | 30. indicator lamp   | 41. to cruise control engage                      | 53. LH rear speaker   |
| 4. to flasher relay                                | 19. fuse No.23- engine cooling fan relay 30 amp      | 31. air conditioner switch   | 42. to trip computer                              | 54. RH rear speaker   |
| 5. to radio / cassette                             | 20. engine cooling fan relay                         | 32. fuse No.8- blower fan, air conditioner, rear dimister relay 25 amp | 43. cruise control brake switch                   | 55. to fuse No.3  |
| 6. radio suppressor                                | 21. to EFI control unit                              | 33. heater blower motor switch   | 44. cruise control brake switch                   | 56. power antenna module  |
| 7. alternator                                      | 22. auxiliary cooling fan (V8 with air conditioning) | 34. heater blower motor resistors                                      | 45. cruise control switch                         | 57. fuse- power antenna motor 6 amp (some models)                                   |
| 8. to alternator wiring lamp                       | 23. engine cooling fan (V6)                          | 35. heater blower motor  | 46. to fuse No. 7                                 | 58. power antenna motor   |
| 9. starter motor                                   | 24. air conditioner compressor clutch                | 36. heater blower motor relay  | 47. fuse No. 13- radio power antenna module       | 59. power antenna switch  |
| 10. starter relay                                  | 25. air conditioner compressor relay                 | 37. to anti-theft module   | 5 amp (pre october 1989 10 amp (october 1989 on)) | 60. main wiring harness earth   |
| 11. ignition switch                                | 26. to EFI control unit                              | 38. fusible link- heater blower motor 30 amp                           | 48. to fuse NO. 9                                 | 61. cruise control an rear wiper switch illumination lamps                          |
| 12. ignition relay                                 | 27. to EFI control unit                              |  | 49. to earth                                      | 62. circuit applicable to models from november 1989 with out a power antenna module |
| 13. to brake fail warning lamp                     |  |  |   |   |
| 14. warning lamp check relay                       |  |  |   |   |
| 15. neutral safety switch (automatic transmission) |  |  |   |   |
|  |  |  |   |   |