



Clip, push upward to  
release the cilinder

LOCK CYLINDER

SOLENOID CONNECTOR

LOCK

249/949

STRIKER

## **LUGGAGE COMPARTMENT LOCK**

### **To Remove and Install**

(1) Raise the luggage compartment lid and remove the lock retaining screws.

(2) Release the retaining clip and disconnect the lock cylinder control rod and if applicable, the remote release solenoid control rod from the lock. Remove the lock from the vehicle.

(3) If necessary, remove the remote release solenoid retaining screws, disconnect the wiring and remove the solenoid from the vehicle.

Installation is a reversal of the removal procedure.

## **LOCK CYLINDER**

### **To Remove and Install**

(1) Raise the luggage compartment lid and remove the lock retaining screws to allow access to the lock rod clip. Release the retaining clip and disconnect the lock cylinder control rod from the lock.

(2) Compress the lock cylinder retaining tangs or remove the retaining clip and remove the lock cylinder from the luggage compartment lid.

Installation is a reversal of the removal procedure.