

## Rear Seat Cushion

### Procedure

1. Pull up on the front of the rear seat to disengage the retainers.
2. Pull out the rear of the seat from the wire retainers.
3. Remove the rear seat center shoulder belt anchor fastener and route the belt through the seat bottom, if equipped.
4. Remove the rear seat.

