

### Manual tailgate release

If the battery has been disconnected or is flat, the tailgate unlock button will not operate.



To open the tailgate, access the cargo area from inside the vehicle.


1. Using a flat-blade screwdriver, remove the rubber cover.
2. Insert a medium flat-blade screwdriver into the hole and turn anticlockwise.

### Closing the tailgate



Use the handle to pull down the tailgate until it drops under its own weight. The tailgate closes and latches itself automatically.

**Note:** It is not necessary to slam the tailgate.

Press  on the key to lock all the doors and tailgate.