


## Rear Object Alarm Control Module Replacement (Ute)

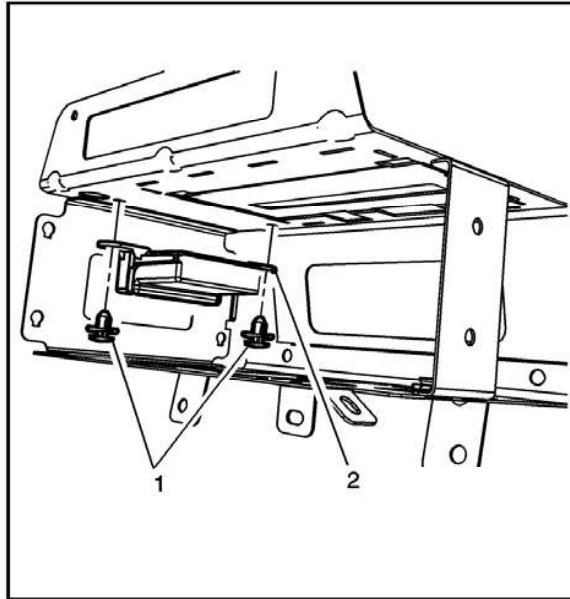

### Rear Object Alarm Control Module Replacement

Callout	Component Name
<b>Preliminary Procedure</b> Remove the rear window trim panel. Refer to <a href="#">Rear Window Panel Trim Replacement</a> .	
1	Rear Object Alarm Control Module Push Pins (Qty: 2)
2	<b>Rear Object Alarm Control Module Procedure</b> <ol style="list-style-type: none"><li>1. Disconnect the electrical connectors.</li><li>2. Remove the module from the radio speaker amplifier bracket.</li><li>3. For programming and set up information, refer to <a href="#">Control Module References</a>.</li></ol>