


Rear Side Door Window Outer Sealing Strip Replacement (Sedan)

Removal Procedure

1. Lower the window to the full down position.

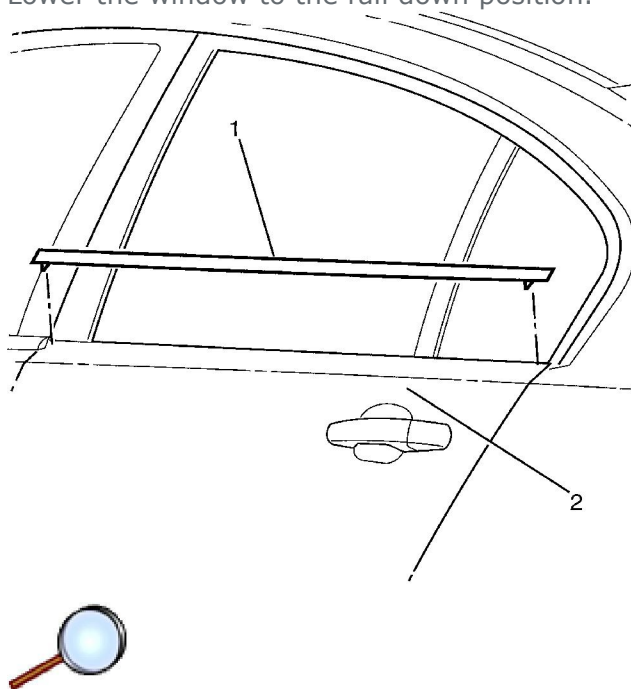

Important: Pull the rear door outer belt sealing strip (1) up to detach th

2. Remove the rear door outer belt sealing strip (1) from the rear door (2).

Installation Procedure