

2.2 TRANSMISSION CONSOLE ASSEMBLY

UTILITY MODELS

REMOVE

1. Unscrew the gear shift knob illustrated in Fig. 1A2-5 in an anticlockwise direction.

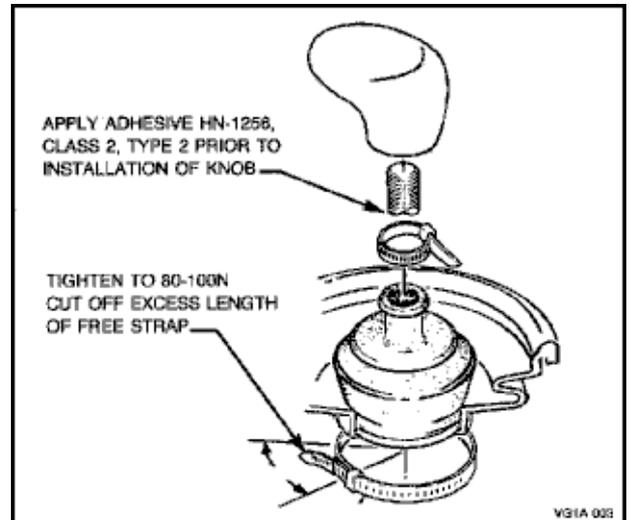


Figure 1A2-5

2. Remove the console attaching screws illustrated in Fig. 1A2-6.

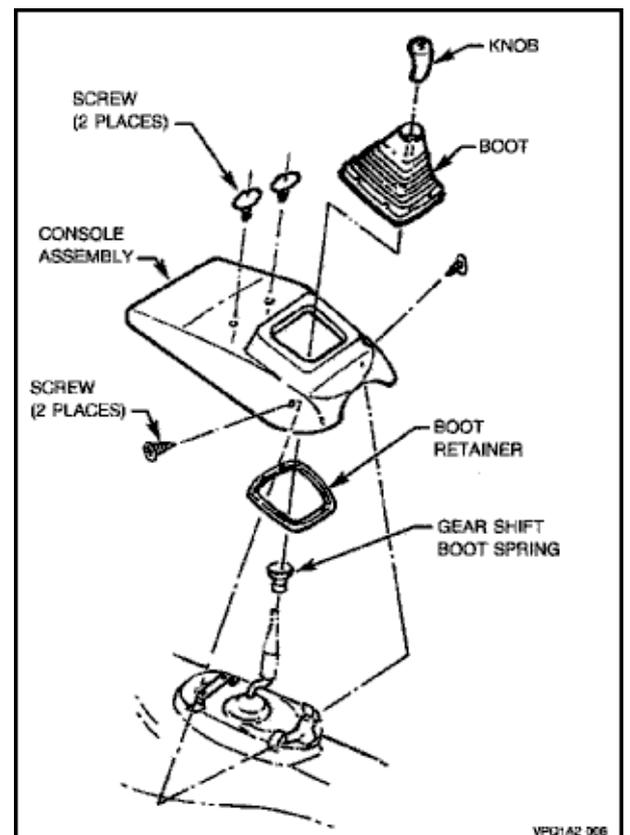


Figure 1A2-6

REINSTALL

Reverse removal operations.

EXECUTIVE, BERLINA, SS MODELS

REMOVE

1. Disconnect battery ground cable.
2. On manual transmissions, unscrew the gear shift knob illustrated in Fig. 1A2-7 in an anti-clockwise direction.
3. For automatic transmissions, carefully prise the front of the cap assembly, illustrated in Fig. 1A2-8, upwards, then forward to release. Disconnect electrical connector. Turn assembly through 90 degrees then remove the cap assembly off the selector lever handle.
4. Unscrew the two adjusting screws at the front of the console, allowing the front of the console to lower, disengaging the locating lugs.
5. Remove the console attaching screws illustrated in Fig. 1A2-8.
6. Unzip the park brake lever cover then, where fitted, disconnect the window regulator switch assembly.
7. Disconnect the rear passenger compartment air conditioning ducting from the outlet at the rear of the console.
8. Disengage the electrical connectors attached to the console, then ease the console rearwards, out of the vehicle.

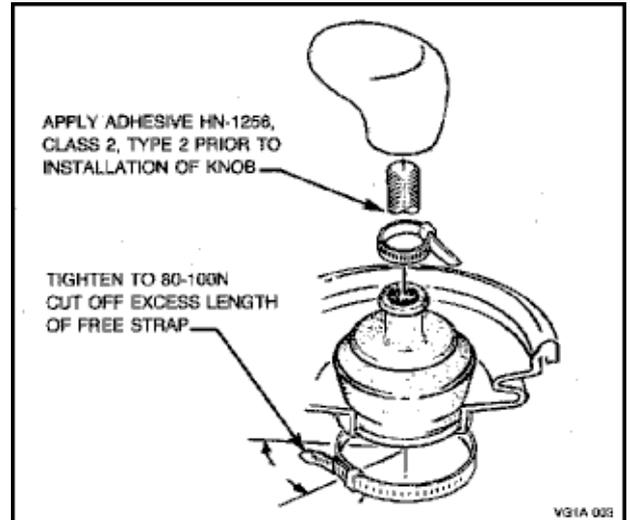


Figure 1A2-7

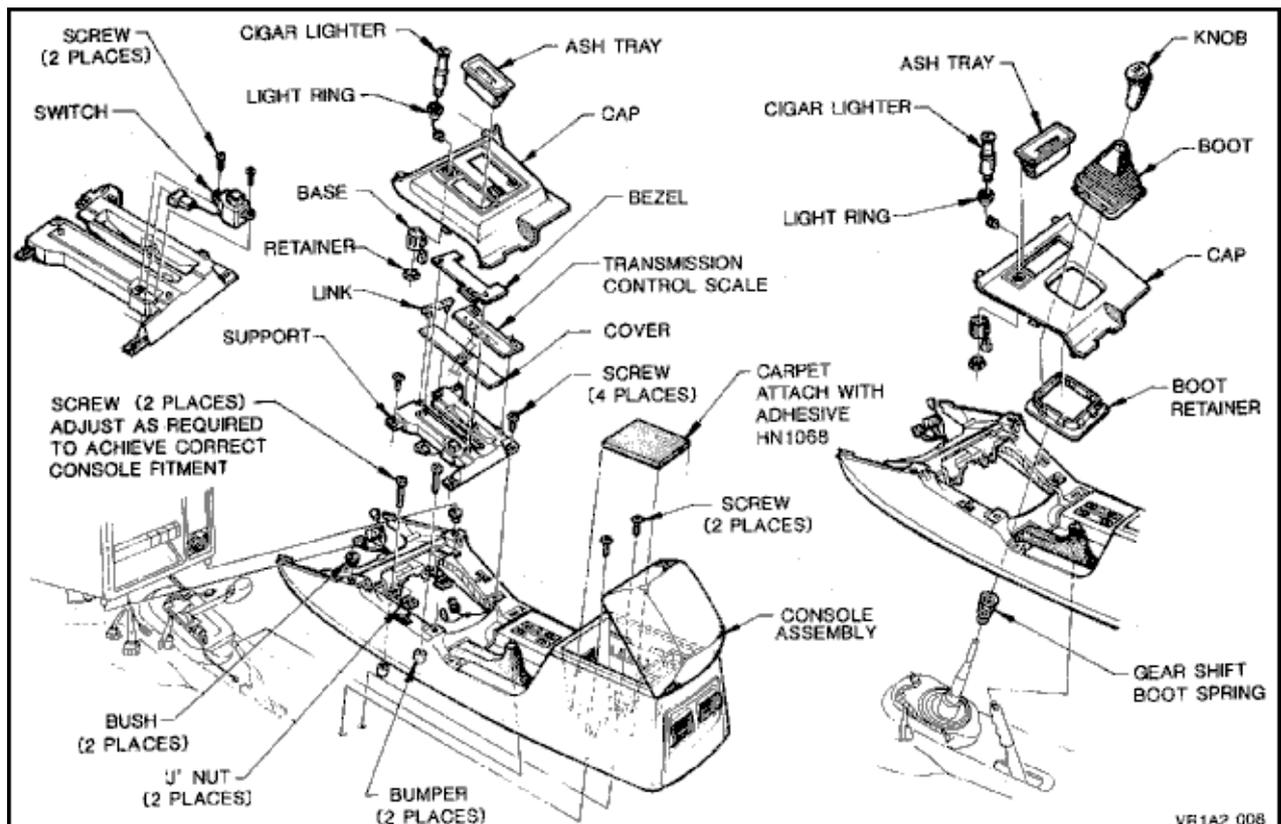


Figure 1A2-8

REINSTALL

Reverse removal operations.

CALAIS, STATESMAN & CAPRICE MODELS

REMOVE

1. Disconnect battery ground cable.
2. Carefully prise the two retainers securing the rear of the console cap from their positions in the console storage box, and with the rear of the cap assembly raised, carefully ease the power window switches from the transmission console cap assembly and disconnect the electrical connectors removing the switches.
3. Ease the front of the cap assembly free of the console and disconnect the two connectors attached to the cigar lighter assembly.
4. Turn assembly through 90 degrees then remove the cap assembly over the gear selector lever handle.
5. Unscrew the two adjusting screws at the front of the console, allowing the front of the console to lower, disengaging the locating lugs.
6. Remove the console attaching screws illustrated in Fig. 1A2-9 from below the carpet in the console storage box.
7. Unzip the park brake lever cover.
8. Disengage the electrical connectors attached to the console, then ease the console rearwards, out of the vehicle.

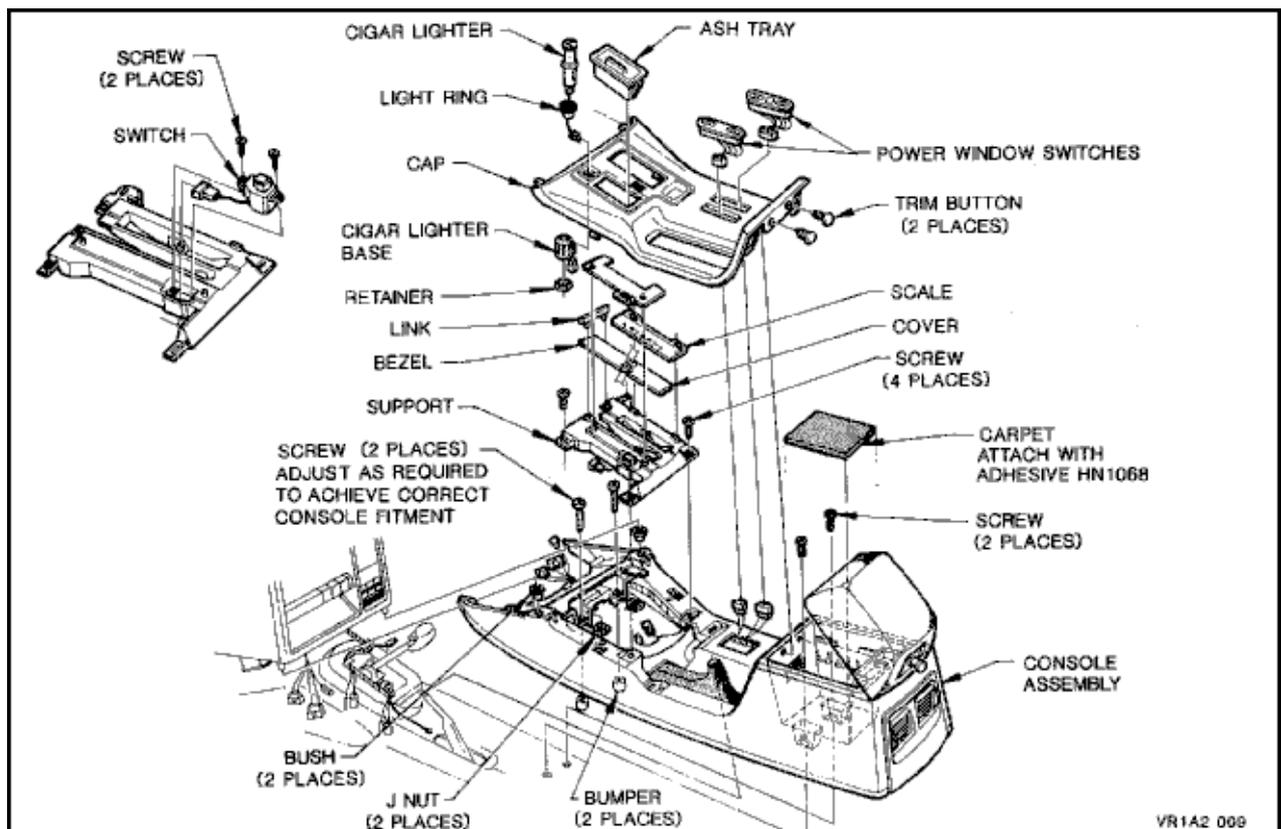


Figure 1A2-9

REINSTALL

Reverse removal operations.