

**Figure 12N-1**

**Legend**

- |                                                 |                                               |
|-------------------------------------------------|-----------------------------------------------|
| 1. F28: Fuel Pump – 15A                         | 9. F36: Throttle Relaxer Control Module – 25A |
| 2. F29: Headlamps, Right Hand Side – 20A        | 10. F37: Spare                                |
| 3. F30: Headlamps, Left Hand Side – 20A         | 11. F38: Spare                                |
| 4. F31: Powertrain & Body Control Modules – 10A | 12. Fusible Link FQ, Lighting 60A             |
| 5. F32: Automatic Transmission – 15A            | 13. Fusible Link FR, ABS 60A                  |
| 6. F33: Engine Sensors – 15A                    | 14. Fusible Link FS, Engine 60A               |
| 7. F34: Fuel Injectors & Ignition Module – 15A  | 15. Fusible Link FJ, Main 60A                 |
| 8. F35: Fuel Injectors & Ignition Module – 15A  | 16. Fusible Link FY, Blower 40A               |

## 1.2 RELAYS

All relays for VT Series II Models carryover from that described in [Section 12N, FUSES, RELAYS AND WIRING HARNESSES](#), of the VT Series I Service Information, except as follows:

1. The start relay has been relocated in the engine compartment fuse and relay panel assembly, refer Fig. 12N-2.

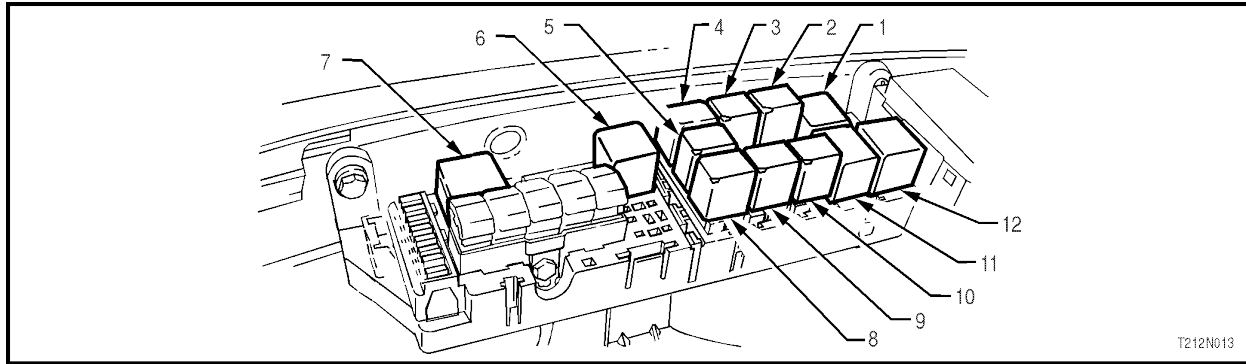


Figure 12N-2

### Legend

- |                                      |                                 |
|--------------------------------------|---------------------------------|
| 1. High Speed Radiator Fan Relay     | 7. Low Speed Radiator Fan Relay |
| 2. Fog Lamp Relay                    | 8. Headlamp Low Beam Relay      |
| 3. Theft Deterrent Horn Relay        | 9. Front Wiper Relay            |
| 4. Horn Relay                        | 10. Fuel Pump Relay             |
| 5. Air Conditioning Compressor Relay | 11. High Beam Relay             |
| 6. EFI Relay                         | 12. Start Relay                 |

1. Two additional relays have been added to the passenger compartment fuse and relay panel assembly.
  - a. An interior illumination relay (YB134) has been added to the location shown in Fig. 12N-3 and is part of the Body Control Module battery saver circuit. For further details refer to [Section 12J-1 LOW SERIES BCM](#) or [Section 12J-2 HIGH SERIES BCM](#) in the VT Series II Service Information.
  - b. A LPG system relay (YB43) (change made during VT production and incorporated into VT 1.5 wiring diagrams – in the VT Series I Service Information).

Fig. 12N-3 illustrates the passenger compartment fuse and relay panel assembly for VT Series II Models

