



HOLDEN

FITTING INSTRUCTIONS FOR TOWBAR KIT

FITTING INSTRUCTIONS: continued...

Refer to Figure 1 for the following:

4. Remove the lower tailgate hinge retaining bolts (1) and discard.
5. Cut the upright body harness cable tie (2) outboard of the tailgate hinge and lower the harness away from the tailgate hinge.
6. Remove the bolts and the scrivets fixing the rear of the tub liner to the tailgate opening.
7. Release the four rear exhaust hangers and allow the exhaust to hang.

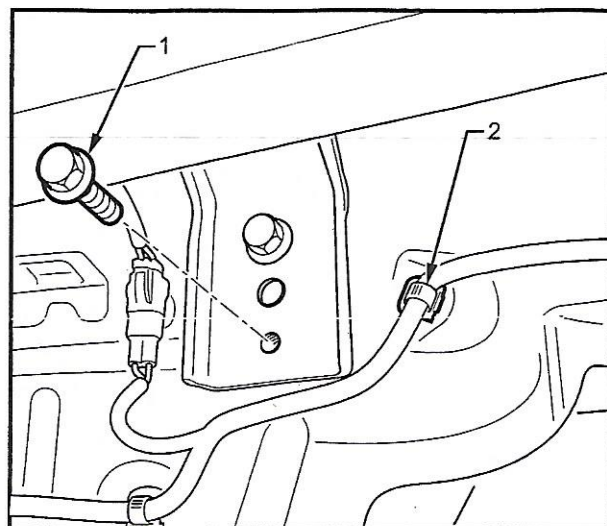


FIGURE 1

Refer to Figure 2 for the following:

8. Use a Torx bit to remove the tray tie down points (1) (3 places each side).
9. Raise the tub liner to gain sufficient room to fit the towbar.

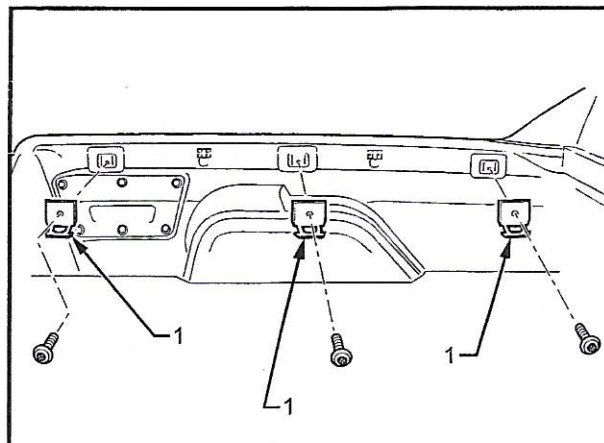


FIGURE 2

Refer to Figure 3 for the following:

10. Clean the area (1) that will be covered by the towbar top plates (2)
11. Pass a screwdriver from up under the vehicle through the existing hole in the longitudinal into the floor of the vehicle tray.
12. Slip the crush tube (3) over the screwdriver into the longitudinal, align the top plate with the vehicle tray and slide onto the screwdriver.
13. Take the towbar fixing bolts (4) and push the screwdriver out of the hole. Repeat on all four crush tube fixings.

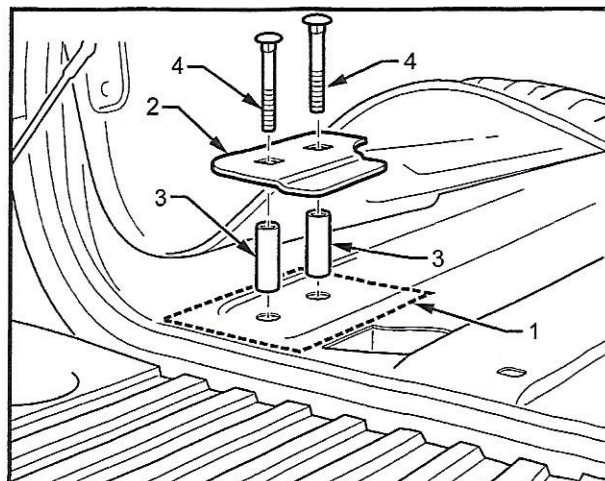


FIGURE 3

92252561
13SE11

COPYRIGHT
Reproduction in whole or part
prohibited without written approval