

 **PDF Complete**  
Your complimentary  
use period has ended.  
Thank you for using  
PDF Complete.

[Click Here to upgrade to  
Unlimited Pages and Expanded Features](#)


[Camaro, Lumina, Omega, VXR8, Sportwagon Service Manual](#) | [Body Repair](#) |  
[Resources](#) | [Repair Instructions](#) | **Document ID: 1977687**

ment

## Removal Procedure

**Important:** When a suitable hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury.

1. Install a suitable hood brace to the vehicle.

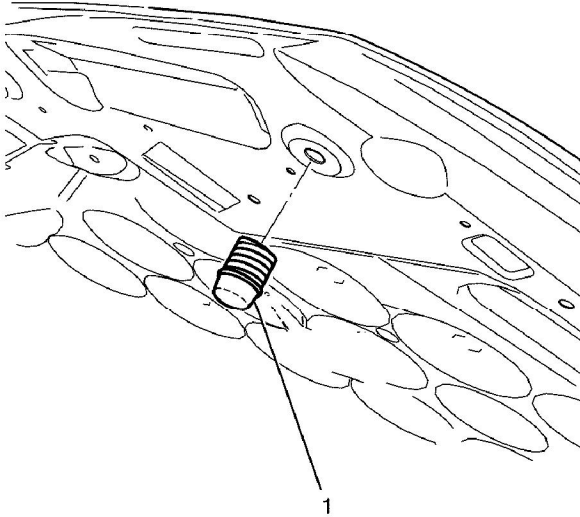

2. Remove the hood bumpers (1) from the hood by turning counter clockwise.

## Installation Procedure